

# INSTALLATION DATA ON LHLP 4500

**A** = From top of bed height to top of trunion tube

**B** = From rear edge of bed to front edge of mounting plate

**B1** = From rear edge of bed to lower front edge of mounting plate

**D** = From top of the trunion tube to the ground

**E** = From bed height to the ground

**F** = From the ground to the rear sill (Laden)

<b>E</b>	<b>A</b>	<b>B</b>	<b>B1</b>	<b>D</b>	<b>F min.</b>
60" MAX.	27"	31-1/4"	32-1/4"	33"	44"
56"	26"	31-15/16"	33-7/16"	30"	44"
52"	25-11/16"	32-7/8"	34-3/8"	25-11/16"	44"
48"	24-5/16"	35-5/6"	36-13/16"	22-11/16"	44"

<b>MAX DIM.</b>	<b>TRUCK</b>	<b>TRAILER</b>
X	24"	12"
Y	30"	22"

**E max** = Bed Height (Unladen)

**E min** = Bed Height (Laden)

A and B are variable dimensions. Maintain the A and B dimensions between range according with E dimension of your truck or trailer.

